



ATTENUATION BASIN MAINTENANCE SCHEDULE

Maintenance Type	Required Action	Typical Frequency	Responsible Party Pre-Adoption	Responsible Party Post Adoption
Regular Maintenance	Remove Litter and debris	Monthly	Landscape Contractor	IWNL (S104 Adopting authority)
	Cut Grass – Grass in and around basin	Half Yearly (Spring – Before nesting season and autumn)	Landscape Contractor	IWNL (S104 Adopting authority)
	Manage other vegetation and remove nuisance plants	Monthly	Landscape Contractor	IWNL (S104 Adopting authority)
	Inspect inlets, outlets, and overflows for blockages and clear if required	Monthly	Groundworks Contractor	IWNL (S104 Adopting authority)
	Inspect banksides, structures, pipework ect. for evidence of physical damage	Monthly	Groundworks Contractor	IWNL (S104 Adopting authority)
	Check any penstocks and other mechanical devices	Annually	Groundworks Contractor	IWNL (S104 Adopting authority)
	Remove sediment from inlets, outlet, headwalls, silt pits and flow controls	Annually	Groundworks Contractor	IWNL (S104 Adopting authority)
Occasional Maintenance	Reseed areas of poor grass growth	As required	Landscape Contractor	IWNL (S104 Adopting authority)
	Check for siltation build up within basin area and establish removal frequencies	Every 2 years or as required. Likely to be required more often during the earlier construction phases.	Groundworks Contractor	IWNL (S104 Adopting authority)