

SUDS MAINTENANCE SCHEDULE

The maintenance of the SuDS feature is detailed below:

Maintenance Schedule	Required Action	Minimum Frequency
Regular Maintenance	Litter and debris removal from site.	6 Monthly.
	Grass cutting to access routes and basin.	As required (min every 8 weeks in summer)
	Inspect and clear inlets, outlets and structures of blockages.	Monthly.
	Management of planted vegetation and removal of nuisance plants.	Monthly on first installation and then as required.
	Inspect banks for any visible physical damage.	6 Monthly.
	Inspect penstock and flow control device for blockage/damage.	Yearly or as required.
Occasional Maintenance	Remove leaf accumulation.	As required.
	Cut back overhanging branches to allow dense vegetation growth.	As required.
	Replacement of neoprene seal if flow control has to be temporarily removed for maintenance or blockage removal.	As required.
	Remove all dead vegetation growth.	Yearly.
Remedial Actions	Repair erosion, level uneven surfaces or damage re-turfing or seeding.	As required.
	Remove silt and spread locally outside design profile and reinstate surface.	As required.
	Repair damage to inlets, outlets, headwalls and banks.	As required.