



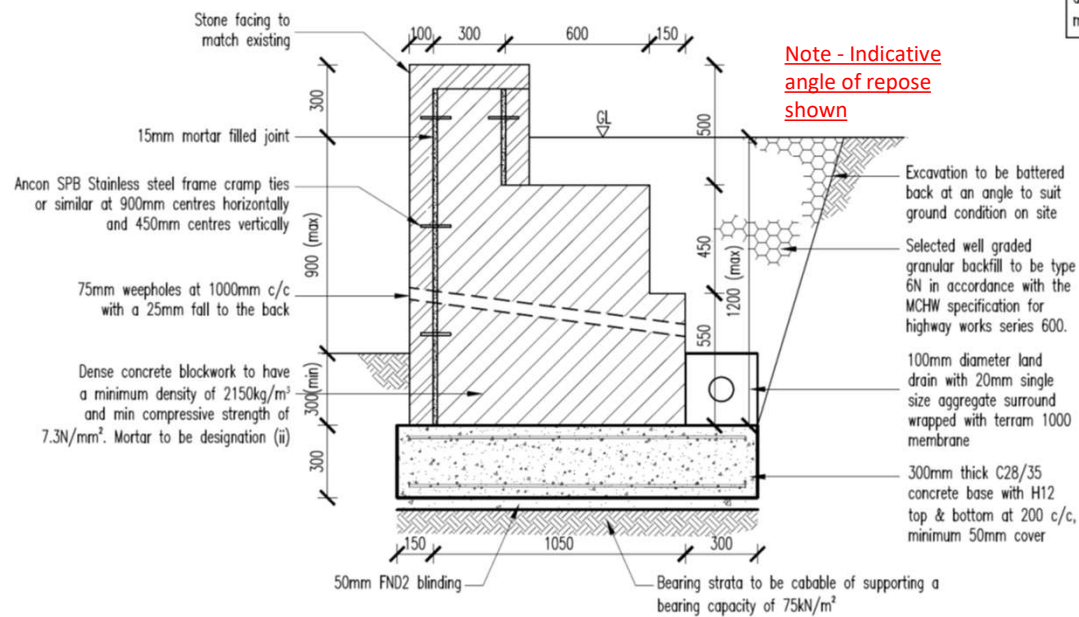


Appendices C - Section Through Existing Wall.

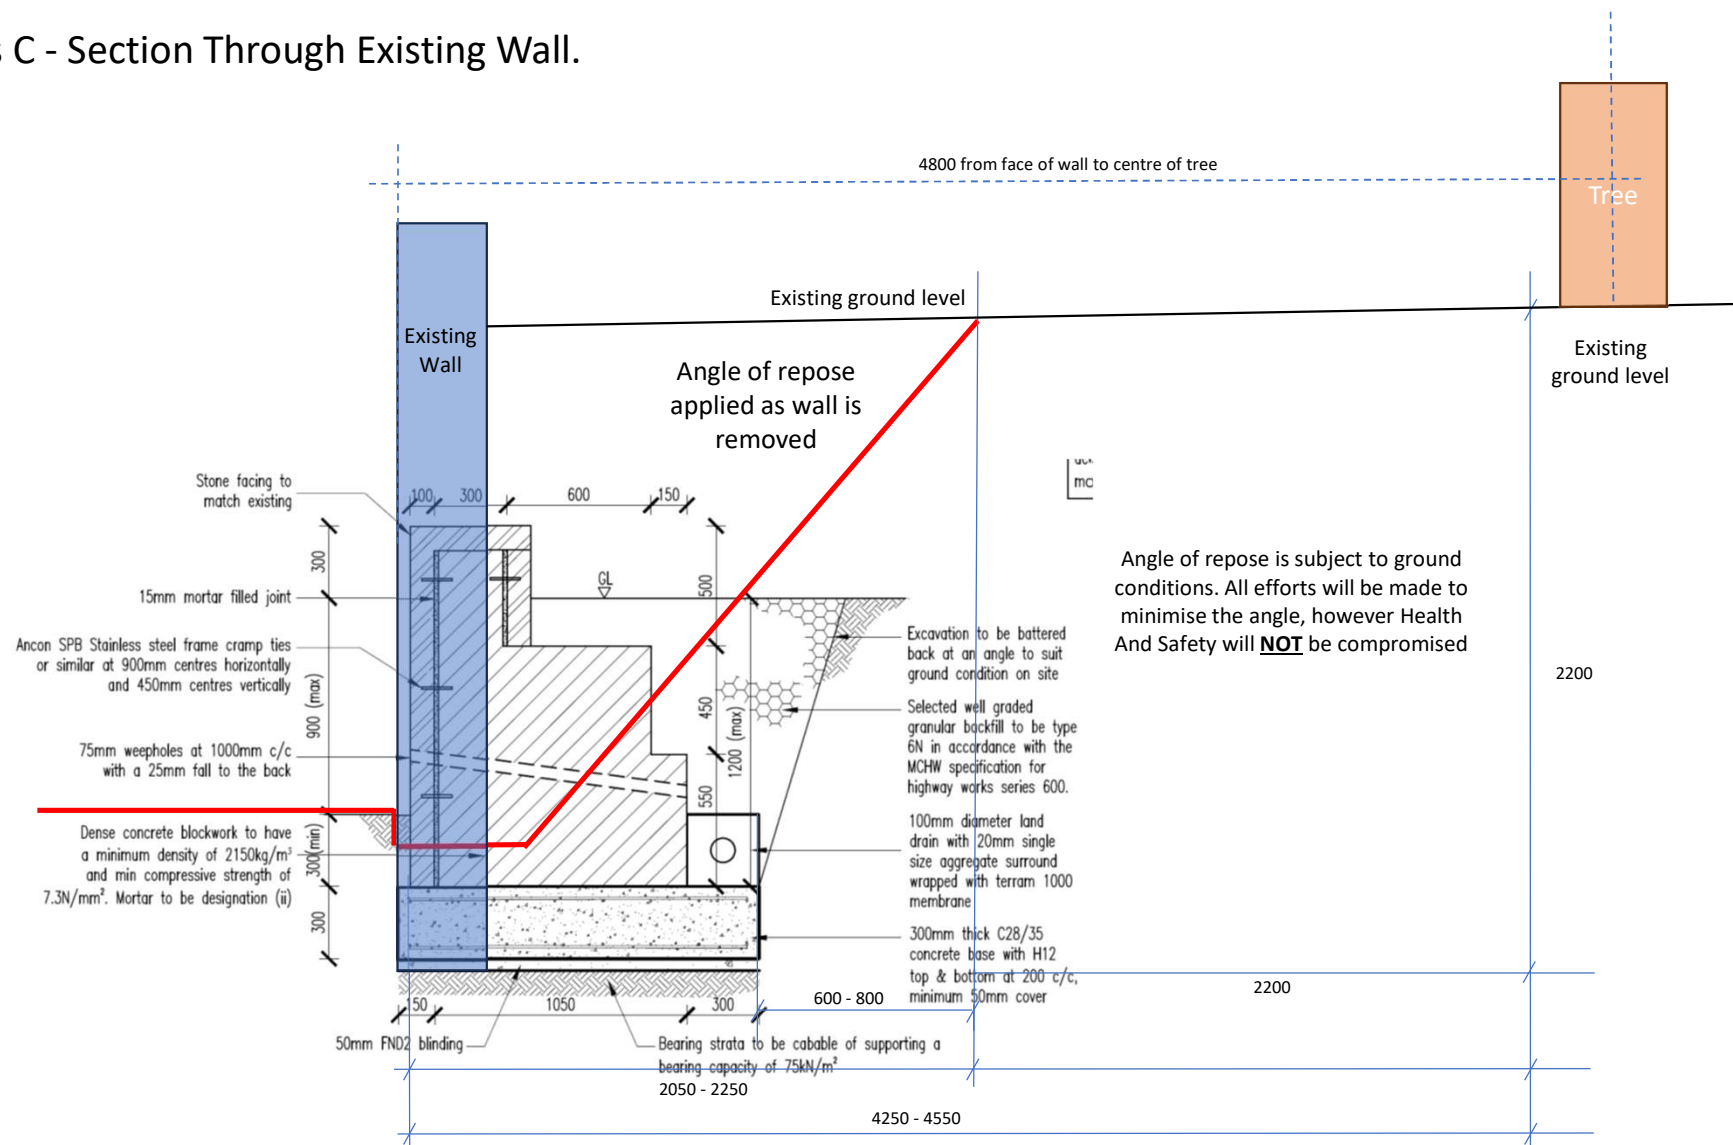

Appendices D - Typical Section Through Retaining Wall Works.

* — - Working Area, the area directly behind the footing and land drain will need to be between 600-800mm wide. This space will allow a safe working area for operatives and shuttering

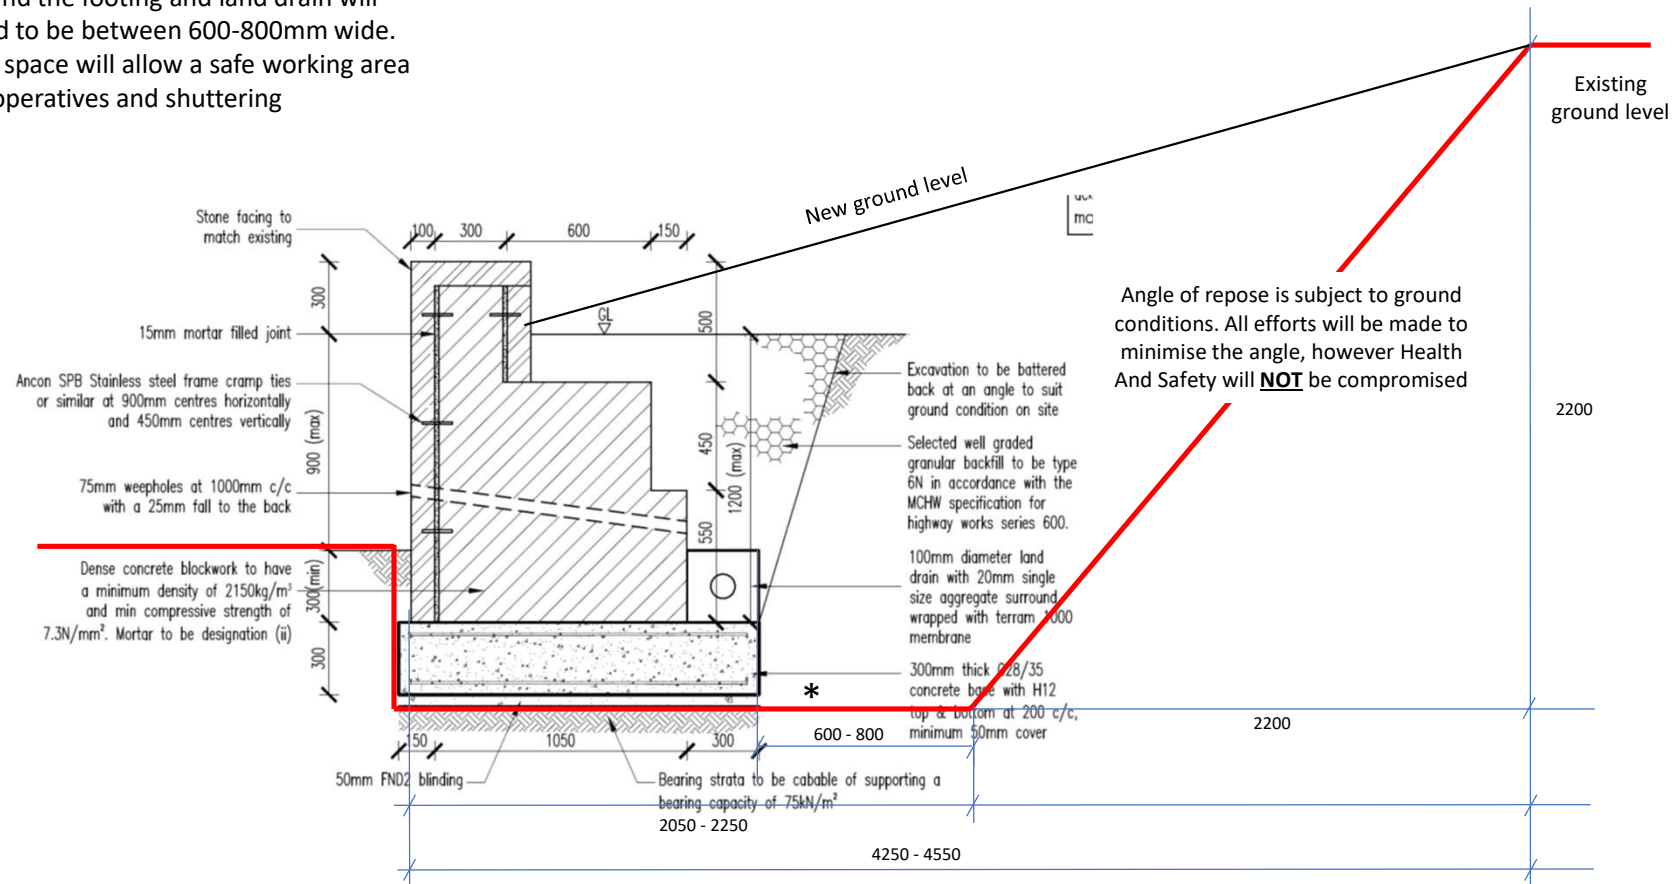

Appendices E - Section Through Retaining Wall Works Showing Tree (T1)

* — - Working Area, the area directly behind the footing and land drain will need to be between 600-800mm wide. This space will allow a safe working area for operatives and shuttering

